
FREQUENCY: 174 - 230 MHz




Assembly Sketches

Y206-1722SS YAGI ANTENNA

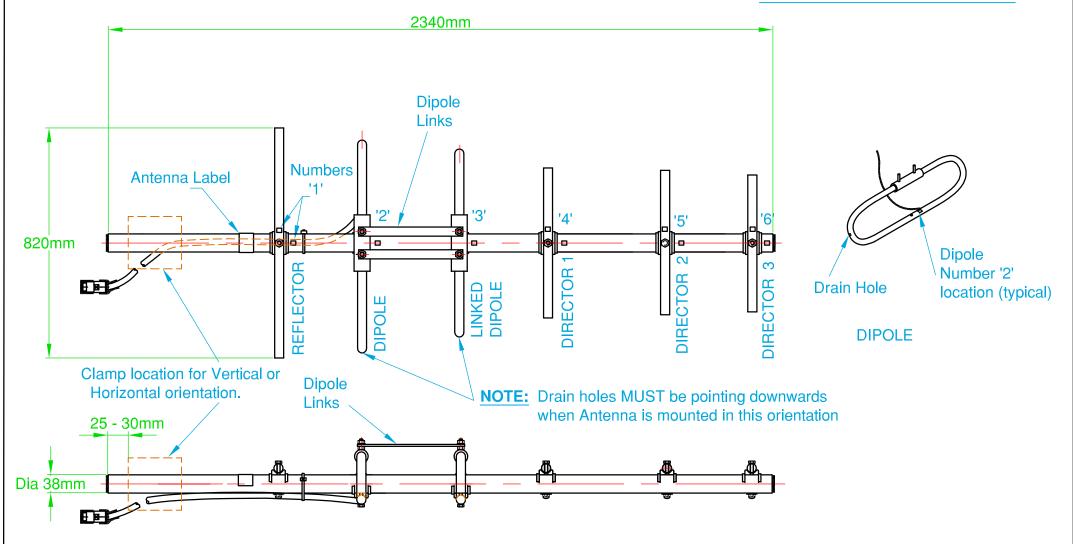



COPYRIGHT - G-Tech COMMUNICATION SERVICES PTY.LTD. NO PART OF THIS DRAWING IS TO BE REPRODUCED WITHOUT WRITTEN PERMISSION.

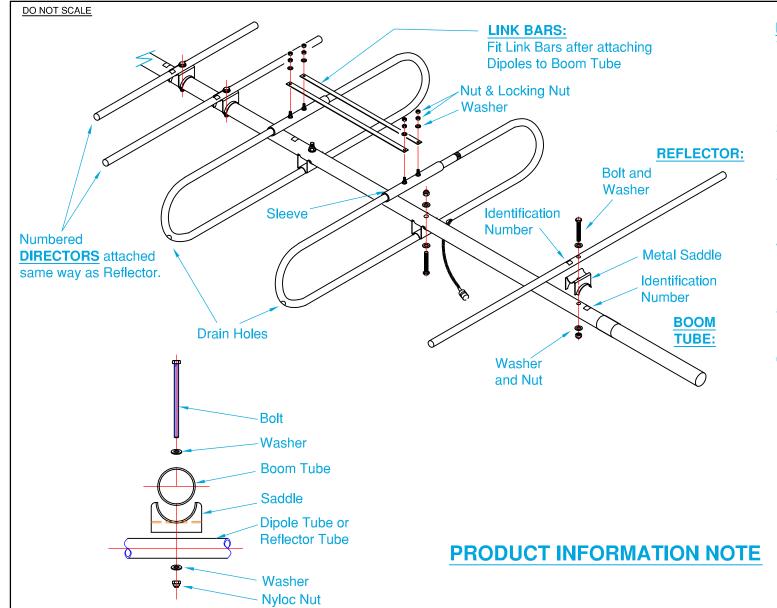

Installation Instructions:

- 1. Fit both Dipoles to the Boom Tube using Bolts & Washers through Dipole Tube, Saddle, Washer & 'Nyloc' Nut matching the assembly numbers shown in the diagram.
- 2. Note that Drain Holes in both Dipoles must be on the same side.
- 3. Fit Link Bars between both Dipoles. Install Link Bars onto Bolts, fit Washers & Nuts then secure with locking Nut.
- 4. Individually fit all other Element Tubes to Boom, matching corresponding Numbers on Element and Boom.
- 5. Strap Cable to Boom using Cable Ties (not provided) or similar.
- 6. Mounting can be HORIZONTAL or VERTICAL polarisation:

For VERTICAL polarisation, make sure the Drain Holes in both Dipoles are facing downwards.

For HORIZONTAL polarisation, mount the Yagi antenna with Cable entry slot downwards.

Assembly Sketch

Y200 - 1722 Series YAGI ANTENNAS

1672-B2.dwg LM 12-12-11 Approved: RG 12-12-11 Rev. 1. 12-12-12 Appr. RG

Typical Assembly





COPYRIGHT - G-Tech COMMUNICATION SERVICES PTY.LTD. NO PART OF THIS DRAWING IS TO BE REPRODUCED WITHOUT WRITTEN PERMISSION