


158EIA15850
1-5/8" EIA connector to suit
1-5/8" foam dielectric coaxial
1-5/8" cable


FITTING
INSTRUCTIONS

ZCG
 www.zcg.com.au


1. Strip cable jacket to dimensions shown below.

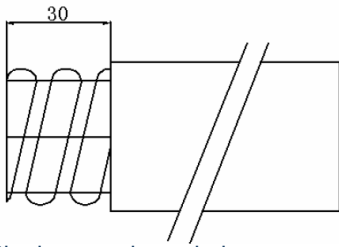


2. Remove the burr as shown below.

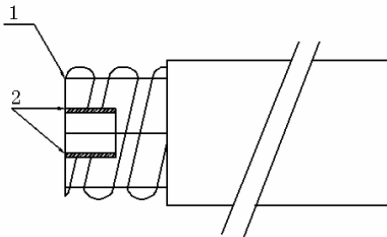


3. Slide one o-ring onto the outer conductor as shown below.

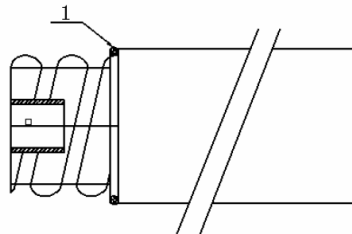


4. Slide another o-ring onto the nut and slide the nut onto the jacket of cable as shown below.

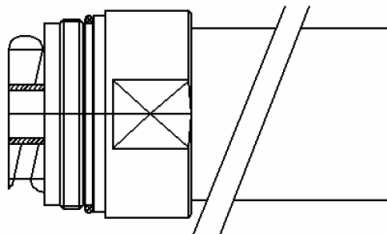


5. Slide the cable clamp on outer conductor of cable as shown below

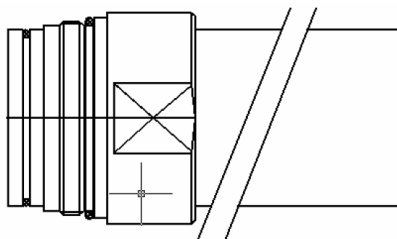

6. Move the cable as per the direction of arrow and keep the cable clamp and outer conductor section at the same plan as show below

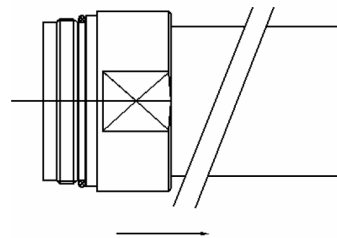

7. Turn up the outer conductor/shielding one round with long flat nose pliers as shown below.

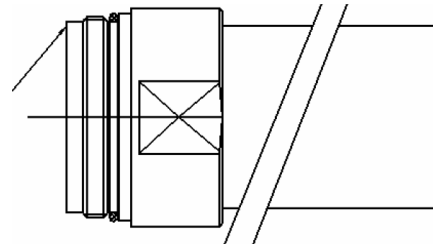

8. Slide the above assembly parts into the body of connector and tighten them together as shown below.

