



## HFS30 BROADBAND WIRE 2 – 30 MHz, UNPACKING INSTRUCTIONS

1. Do not unroll antenna wires until antenna is onsite in a large clear area.
2. Remove antenna so that the Balun unit can hang clear on its four wires below the rest of the antenna. This is how the antenna will be when erected.

3.

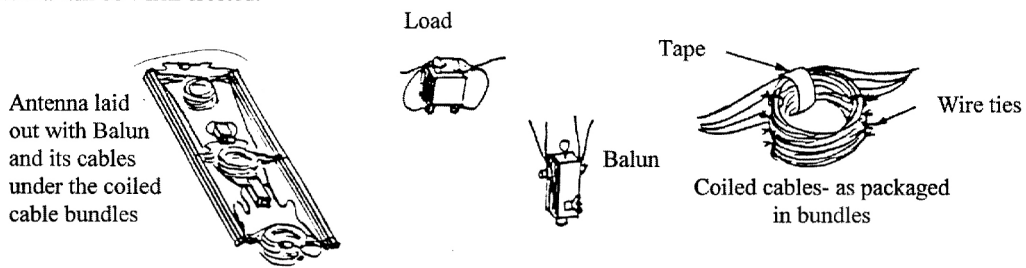


4.

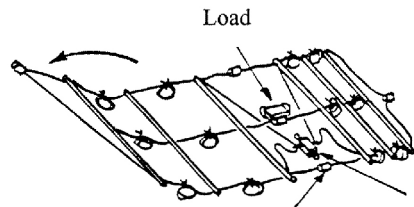


Remove tapes from bundles - leave wire ties on individual coils. Spread out one end from centre, then the other.

5.

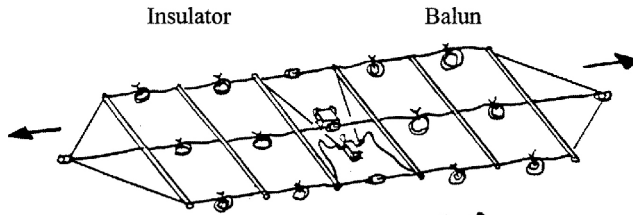


Starting at one end, remove wire ties from coils in one bay, and stretch out. Progress to next inner bay and repeat. Repeat for other end.

6.

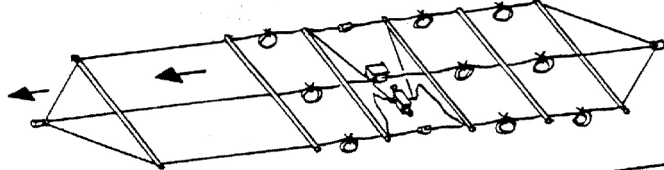

7.

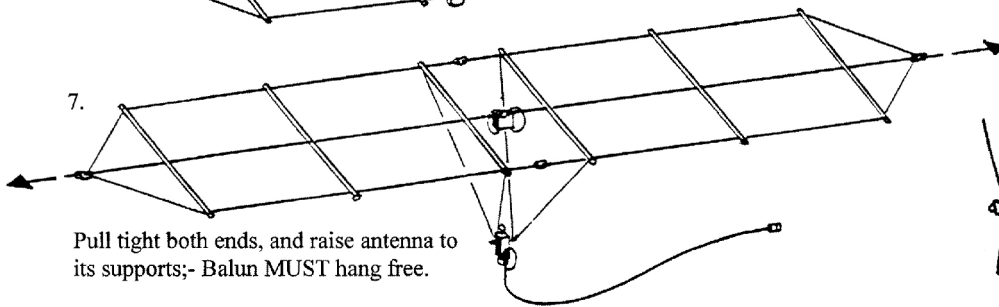

### IMPORTANT

Once the wire ties are removed from each set of three rolls, the wires must be extended full length to avoid entanglement.

It is not possible that the antenna wires have been crossed during manufacture so if a twisting or crossing of wires does occur, intelligent assessment of the situation should enable the cross to be removed before despar sets in or the wire cutters leave the toolkit.